Iridium Network LT-3100S System

LT-3100S GMDSS System Overview New GMDSS Standard & Requirements LT-3100S GMDSS System:


- System Units & Installation
- •GMDSS SIM Card & Activation
- GMDSS Services
- Non-GMDSS Services
- Specifications





Iridium Network LT-3100S System

LT-3100S GMDSS System Wiring

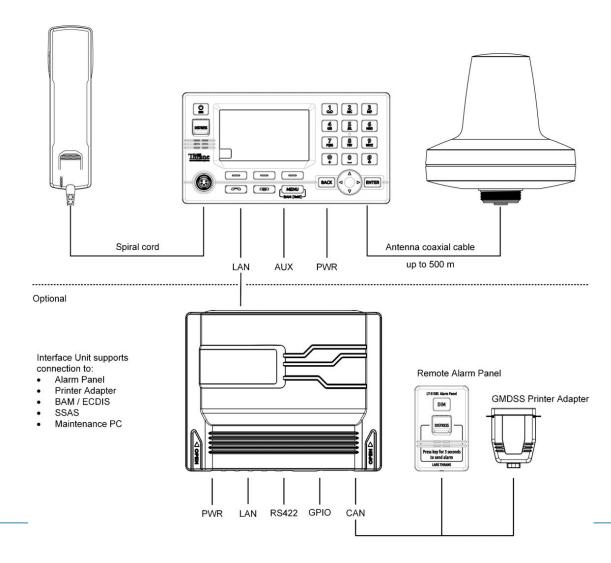

Iridium Network LT-3100S System

New GMDSS Standards & Definitions



What?

- •IEC (The International Electrotechnical Commission) is a worldwide organization for standardization
- •In 2019 IEC issued a new standard & definitions for GMDSS satellite communication: **IEC 61097-16**

Old Definition for SES (Ship Earth Station):

"INMARSAT C ship earth stations (SES)"





New Definition for SES (Ship Earth Station):

"Ship earth stations (SES) intended for operation in mobile satellite systems and services which are recognized by IMO" In 2019 Iridium was recognized by IMO as GMDSS Service Provider

LT-3100S System New GMDSS Standards & Definitions

8



New IEC standards for SES (Ship Earth Station) equipment §4.7:

For the presentation of received distress and urgency alerts/calls intended as text to be read, the equipment shall include or interface to either:

- 1.an integrated printing device; or
- 2.a dedicated display device, printer output port and a non-volatile message memory; or
- 3.a connection to a navigation system and a non-volatile message memory
- •LT-3100S GMDSS System offers "dedicated display", "printer output" and "non-volatile message memory"



LT-3100S System: Requirements for GMDSS

Sea Area	VHF DSC 1	VHF DSC 2	MF DSC	MF/HF DSC incl. HF telex	SES 1 Iridium/ Sat C	SES 2 Iridium/ Sat C	Navtex Epirb/Sart Port. VHF
A1	X						Х
A2	X		X				Х
А3	X	Х	X	X	Х		Х
A3 Sat	Х	Х	X		Х	X	Х
A4	Х	Х	X	хх	X		X

Existing Requirements

New Arrangement



LT-3100S GMDSS System - basic

In The Box:

- LT-3110S Control Unit
- •LT-3120 Handset / LT-3121 Cradle
- LT-3130 Antenna Unit
- •Bracket Mount, Control Unit (incl. knobs and 4 x

A4 self cutting screws)

- •Power Cable, 3m
- •4 x Unit Test Sheets
- LT-3100S User & Installation Manual





LT-3100S GMDSS Functionality



Distress Activated Distress Activated Distress Alert Status Call Status Nature of Distress RCC Name RCC Country Select Nature Cancel Distress Select Nature Cancel Distress

GMDSS functionality:

- Distress Alert / Call
- Maritime Safety Information (MSI)
- Safety Calling
- Safety Messaging
- Bridge Alert Management (BAM)
- Navigational (NAV) interface
- Terminal Test

